


How to Identify Your Drawer Style?

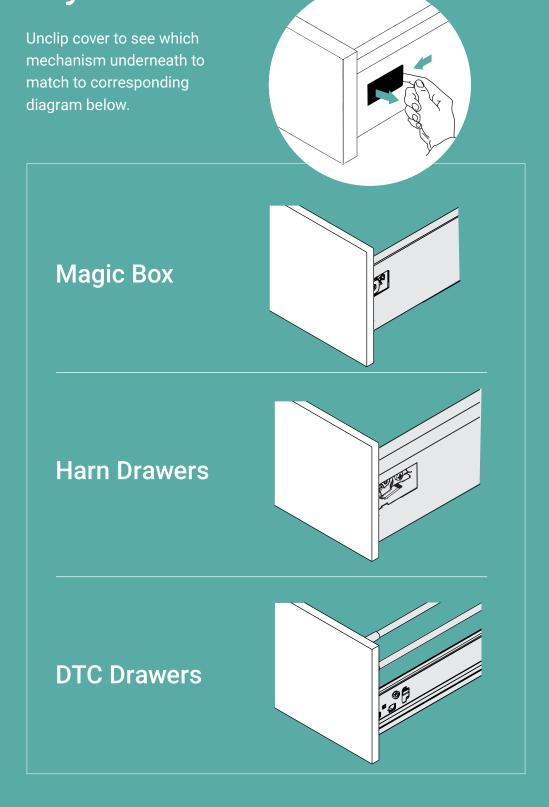




MAGIC BOX DRAWER ADJUSTMENT


Left/Right Adjustment

You can adjust the drawer left or right by turning the front screw clockwise or counter clockwise to the desired position.

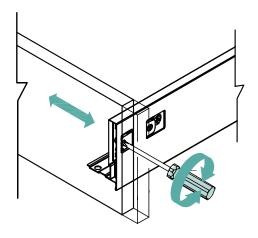


Up/Down Adjustment

To adjust the doors up or down, turn the back screw clockwise or counter clockwise to the desired position.

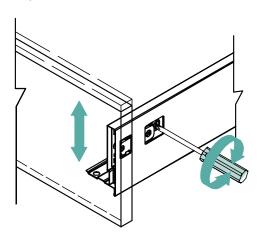

In/Out Adujustment


You can adjust the drawer front in or out by pushing or pulling the leaver at both sides of the bottom of the drawer.

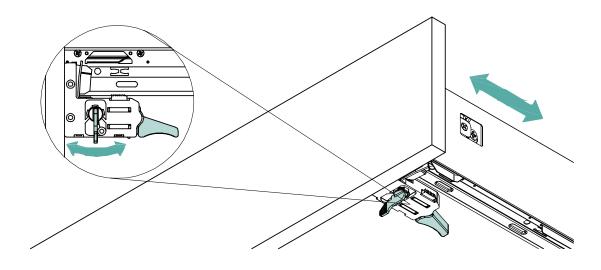



MAGIC BOX DRAWER REMOVAL

Drawer Removal

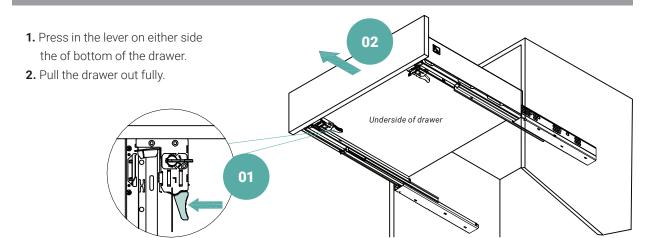

• When reinstalling, push the drawer fully in to engage the soft close mechanism.

FRONT PANEL DISASSEMBLY

1. Pull clip off both sides of drawer.

2. Unscrew mechanism to pull front panel away.

