

/ INSTALLATION INSTRUCTIONS

CONTOURED POP-UP BASIN WASTE


SKU: PUW68R (with overflow) | W22 NEW VERSION (with out overflow)



A contoured waste has a bevelled edge on the chrome flange of the waste and a Washer installed either side to help Prevent it from coming into contact with the porcelain and cracking the basin.

DO NOT OVER TIGHTEN - HAND TIGHTEN ONLY

DO NOT REMOVE &/OR USE SILICONE

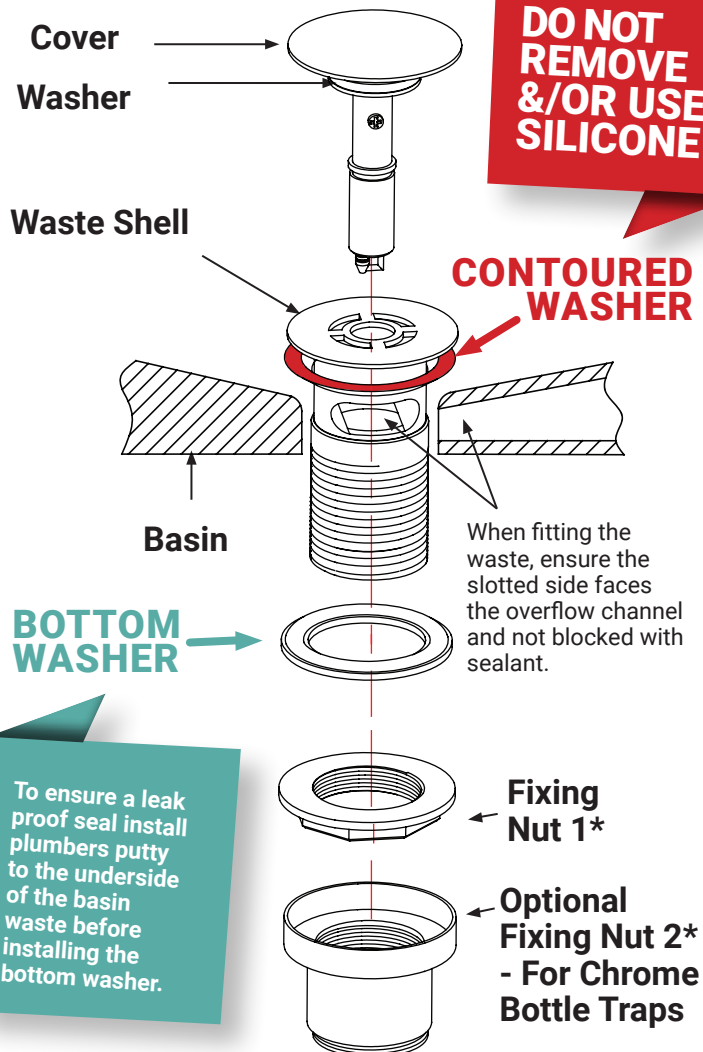

When fitting the waste, ensure the slotted side faces the overflow channel and not blocked with sealant.

To ensure a leak proof seal install plumbers putty to the underside of the basin waste before installing the bottom washer.

* Two Fixing Nuts are supplied for your selection.

USE CONTOURED WASHER PROVIDED
DO NOT REPLACE WITH SILICONE
THE USE OF SILICONE WILL
VOID THE VANITY WARRANTY

IMPORTANT

- Please check this product immediately to ensure that it has not been damaged and is complete. Before installation, please make sure this product is the correct model and you have all the parts required for installation and using.
- Please read these instructions carefully and keep it for future reference.